

KEY

- | | | | |
|--|---|--|---|
| 1. Distributor. | 38. Resistance wire. | 70. Stop lamp switch. | COLOR CODE
B—Black.
Y—Yellow.
R—Red.
W—White.
P—Pink.
GR—Grey.
OR—Orange.
PU—Purple.
DG—Dark green.
LG—Light green.
LBL—Light blue.
DBL—Dark blue.
DBR—Dark brown.
LBR—Light brown.
WDG—White/dark green tracer.
WPU—White/purple tracer.
WDBL—White/dark blue tracer.
WDBR—White/dark brown tracer. |
| 2. Ignition Coil. | 39. Alternator charge warning light. | 71. Rear compartment lamp. | |
| 3. Alternator. | 40. Inhibitor and reversing light switch. | 72. Dome lamp. | |
| 4. Regulator. | 41. Bulkhead and engine harness connector. | 73. Rear compartment lamp switch. | |
| 5. Relay for accessory horns. | 42. Heater resistance. | 74. LH auxiliary direction indicator and reversing lamp. | |
| 6, 7, 8. Extra high, high and low note accessory horns. | 43. Heater blower. | 75. Rear compartment lamp and switch (accessory). | |
| 9. Low note horn (standard). | 44. Battery. | 76. RH rear quarter lamp. | |
| 10. High note horn (standard). | 45. Starter motor and solenoid. | 77. LH rear quarter lamp. | |
| 11. Radio. | 46. Oil pressure sending unit. | 78. LH rear door switch. | |
| 12, 13, 14, 15. Instrument panel lamps. | 47. Temperature sending unit. | 79. RH rear door switch. | |
| 16. Fuse panel. | 48. Kickdown solenoid. | 80. LH rear door window operator. | |
| 17. Clock. | 49. Windscreen washer. | 81. Fuel gauge tank unit. | |
| 18. Cigar lighter. | 50. Windscreen wiper. | 82. LH rear door window operator switch. | |
| 19. Cigar lighter lamp. | 51. Bulkhead and lighting harness connector. | 83. RH rear door window operator switch. | |
| 20. Cigar lighter lamp switch. | 52. Brake failure warning light switch. | 84. RH rear door window operator. | |
| 21. Kick down solenoid switch. | 53. RH parking and direction indicator lamps. | 85. LH front door window operator. | |
| 22. Window operator circuit breaker. | 54. RH headlamp. | 86. LH front door window operator switch. | |
| 23. Oil pressure gauge. | 55. RH high beam lamp. | 87. RH front door window operator. | |
| 24. Aerial power drive switch. | 56. LH high beam lamp. | 88. RH front door window operator switch | |
| 25. Aerial power drive. | 57. LH headlamp. | 89. Tailgate window operator switch. | |
| 26. Heater switch. | 58. LH parking and direction indicator lamps. | 90. Window operator relay. | |
| 27. Fuel gauge. | 59. High beam warning lamp. | 91. LH flasher warning lamp. | |
| 28. Brake failure and handbrake warning lamp. | 60. Dipper switch. | 92. RH flasher warning lamp. | |
| 29. Temperature gauge. | 61. Windscreen wiper switch. | 93. Tailgate window operator switch in lock. | |
| 30. RH direction indicator and reversing lamp. | 62. Horn push. | 94. Direction indicator switch. | |
| 31. RH tail and stop lamps. | 63. Direction indicator switch connector. | 95. Flasher unit. | |
| 32. Number plate lamp. | 64. Lighting switch. | 96. Tailgate window operator. | |
| 33. LH tail and stop lamps. | 65. RH footwell lamp. | 97. Tailgate safety switch. | |
| 34. LH direction indicator and reversing lamp. | 66. RH front door switch. | | |
| 35. LH auxiliary direction indicator and reversing lamp. | 67. LH front door switch. | | |
| 36. Ignition switch. | 68. LH footwell lamp. | | |
| 37. Body harness connector. | 69. Handbrake warning lamp switch. | | |